Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49-2191-9672-0 • Fax -40

www.ghm-messtechnik.de • info@honsberg.com

### **Produktinformation**

# **GHM-HONSBERG**

**FLEX-RRI** 

# Flow Transmitter / Switch FLEX-RRI



- Uncomplicated measurement of flow rates
- No magnets; uses inductive sensor
- Long working life thanks to ceramic axis and special plastic bearing
- Run-in and run-out sections are not necessary.
- Modular construction with various connection systems
- Plug-in and rotatable connections
- Analog output and switching output
- Designed for industrial use
- Small, compact construction
- Simple installation
- Simple to use
- Cable outlet infinitely rotatable
- Optionally, non-return valve, filter, constant flow rate device in the connections

# Characteristics

The flow meter consists of a spinner which is rotated by the flowing medium. The rotor's rotational speed is proportional to the flow volume per unit time. The rotor is fitted with stainless steel clamps (optionally titanium or Hastelloy®). An inductive proximity switch records the rotational speed, which is proportional to the flow rate.

The FLEX transformer on the sensor has an analog output (4..20 mA or 0..10 V) and one switching output, which can be configured as a limit switch for monitoring minimal or maximal, or as a frequency output.

The switching output is designed as a push-pull driver, and can therefore be used both as a PNP or an NPN output. The state of the switching output is signalled with a yellow LED in the switching outlet; the LED has all-round visibility.

The sensor is configured in the factory, or alternatively this can be done with the aid of the optionally available ECI-1 device configurator (USB interface for PC). A selectable parameter can be modified on the device, with the aid of the magnet clip provided. In this case, the current measured value is saved as the parameter value. Examples of these parameters are the switching value or the metering range end value.

The stainless steel electronics housing is rotatable, so it is possible to orient the cable outlet after installation.

### Technical data

inductive	
	inductive

Nominal width	DN 10 (FLEX-RRI-010	
	DN 25 (FLEX-RRI-025	,
Mechanical	female thread G 3/8, G	
Connection	male thread G 3/8 A, G	1 A
	hose nozzle Ø11, Ø30	
	(other threaded, crimp	ed, and plug-in
		ons with constant flow
	rate device or limiters	available on request)
Metering ranges	0.1100 l/min	
	for details, see table "	Ranges"
Measurement	±3 % of the measured	value
accuracy		
Repeatability	±1 % of full scale valu	е
Pressure loss	max. 0.5 bar	
Pressure	PN 16 bar	
resistance		
Medium	060 °C	
temperature		
Storage	-20+80 °C	
temperature		
Materials	Housing	PPS
medium-contact		(Fortron 1140L4)
	Rotor	PVDF
	Clamps	1.4310
		optionally:
		titanium or
		Hastelloy®
	Bearing	Iglidur X
	Axis	ceramic Zr0 <sub>2</sub> -TZP
	Seal	FKM
Materials, non-	Clamps	1.4301
medium-contact	•	
medium-contact	Electronic adapter	CW614N nickelled
	Electronics housing	stainless steel
		1.4305
Supply voltage	1830 V DC	
Power	< 1 W	
consumption		
Analog output	420 mA / max. load 5	
	010 V / min. load 1 k	That is a second of the second
Switching output	transistor output "push	
	(resistant to short circ	uits and polarity
	reversal)	
	I <sub>out</sub> = 100 mA max.	
Display	yellow warning LED in	
Electrical	for round plug connec	tor M 12x1, 4-pole
connection		
Ingress protection	IP 67	
Weight		pprox. 0.4 kg
	FLEX-RRI-025 a	pprox. 0.7 kg
Conformity	CE	
	1	

... professional Instruments "MADE IN GERMANY"



#### GHM Messtechnik GmbH - Location Honsberg

Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49-2191-9672-0 • Fax -40 www.ghm-messtechnik.de • info@honsberg.com

# GHM-HONSBERG

**FLEX-RRI** 


### **Produktinformation**


#### Signal output curves

Value x = Begin of the specified range = not specified range


Current output

Voltage output

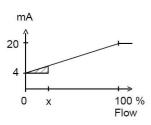

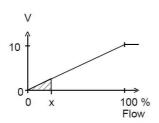

Frequency output

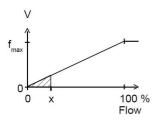

 $f_{\text{max}}$  selectable in the range of up to 2000 Hz


Other characters on request.

#### Ranges

Metering range I/min (H <sub>2</sub> O)		Types	<b>Q</b> <sub>max</sub> I/min (H <sub>2</sub> O)		
0.1	1.5	FLEX-RRI-010020	1.8		
0.2	10.0	FLEX-RRI-010050	12.0		
0.4	12.0	FLEX-RRI-010070	14.4		
2.0	30.0	FLEX-RRI-025080	36.0		
3.0	60.0	FLEX-RRI-025120	72.0		
4.0	100.0	FLEX-RRI-025160	120.0		

The measured values were determined with horizontal flow (FLEX electronics upwards) using water at 25  $^{\circ}$ C.

#### Wiring

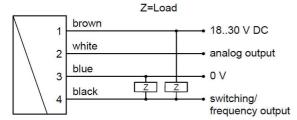


Connection example: PNP NPN



Before the electrical installation, it must be ensured that the supply

voltage corresponds to the data sheet.
The use of shielded cabling is recommended.

#### **Dimensions**

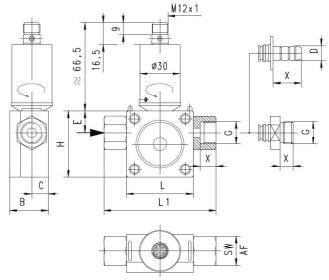

#### Threaded connection

G	DN	Types	H/L	L1	В	С	E	X	SW
G 3/8	10	RRI-010G	50	84	29	12.5	16.5	12	22
G 3/8 A		RRI-010A						14	
G 1	25	RRI-025G	70	110	53	23.0	27.5	18	38
G1A		RRI-025A		122					

Hose nozzle connection

D	DN	Types	H/L	L1	В	С	E	X
Ø11	10	RRI-010T	50	96	29	12.5	16.5	21
Ø30	25	RRI-025T	70	176	53	23.0	27.5	45

# **Handling and operation**

## Installation

The Rototron device is installed in the pipework with the aid of the rotatable adapter pieces. If necessary, the adapters can be removed from the body of the housing after the stainless steel clips have been removed from the housing. Before reinstalling, it should be ensured that both the adapter with the O-ring and the sealing surface in the body are clean and undamaged. The adapters should be fitted carefully in the housing (it is best to turn them), so that the O-ring is not damaged.

With this flow sensor, there is no need for run-in and run-out sections. However, it should be ensured that the flow sensor is at all times filled with medium. Any preferred installation position is possible, but the best possible venting position should be chosen (rotor axis horizontal, flow horizontal or from bottom to top).

Air bubbles affect the measurement results. For filling processes, the valve should be installed behind the sensor. A running up time of approx. 0.5 seconds and a running down time of approx. 3 seconds should be noted.

#### **Programming**

The electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and 2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).

www.ghm-messtechnik.de • info@honsberg.com

# **Produktinformation**







After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.


In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50% can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".


Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.

The limit switch can be used to monitor minimal or maximal.


With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is again exceeded.

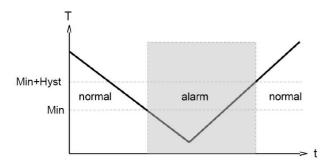

With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

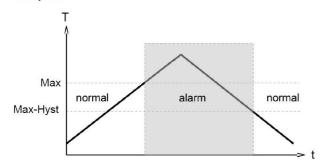


A switchover delay time ( $t_{DS}$ ) can be applied to the switchover to the alarm state. Equally, one switch-back delay time ( $t_{DR}$ ) of several can be applied to switching back to the normal state.

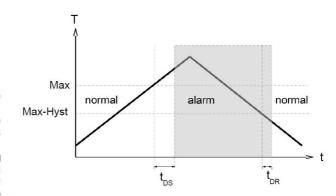

In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply voltage.

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.

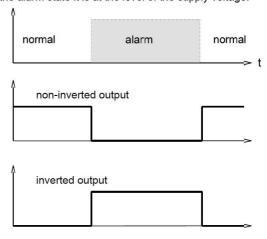

A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

#### GHM Messtechnik GmbH - Location Honsberg

Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49-2191-9672-0 • Fax -40

www.ghm-messtechnik.de • info@honsberg.com



# **FLEX-RRI**

#### **Produktinformation**

# Ordering code

The basic device is ordered e.g. RRI-010... with electronics e.g. FLEX-RRI-010...

RRI-	2.	3.	4.	5.	6.	7.	8.	9. <b>E</b>	
FLEX-RRI-	10.	11.	12.	13.	14.				

O=Option

1.	Nomi	nal	width		
	010	iiui	DN 10		
	025		DN 25		1
2.	170000000000000000000000000000000000000	anio	cal connection		
	G	uiii	female thread		
	A		male thread		
	T		hose nozzle		
3.		octi	on material		
J.	V	CCII	PVDF		
	M	0	CW614N nickelled		
	K		1.4305		
4.			material		
4.	Q	iiig	PPS		
	V		PVDF		
		_	SW 1 AND SWILLIAM SWI		
_	A		PPS with transparent cover PSU		
5.		us 1	flow drilling Ø 2.0		
	020		Ø 5.0		H
	070		Ø 7.0		H
	080		Ø 8.0 Ø12.0		H
	120		MASS - 200		╁
^	160		Ø16.0		+
6.	Seal	mate			
	V	_	FKM		
	E		EPDM		
	N		NBR		
7.	Roto				
	10	_	with 10 clamps		
	02		with 2 clamps		
	05		with 5 clamps		
8.		rial 1	for clamps		
	K		1.4310		
	Т		titanium		
2001	Н		hastelloy®		
9.	Hard pass records	ecti	on for		
	E		electronics		
10.	For n	omi	nal width		
	010		DN 10		1
	025		DN 25	•	f
11.	Analo	og o			_
		3	current output 420 mA		_
	U		voltage output 010 V		
	K		no analog output		
12.		hin	g output		
	Т		push-pull		
	M	0	NPN (open collector)		
	K	-	no switching output		

13.	Switchin	Switching function							
	L	minimum-switch							
	Н	maximum-switch							
	R	frequency output							
	K	no switching output							
14.	Switching signal								
	0	standard							
	1 0	inverted							

# Options for FLEX

Options for I LLX	
Special range for analog output: <= metering range (standard = metering range)	[l/min
Special range for frequency output: <= metering range (standard = metering range)	l/min
End frequency (max. 2000 Hz)	Hz
Switching delay (from Normal to Alarm)	s
Switchback delay (from Alarm to Normal)	s
Power-On delay period (099 s) (time after power on, during which the outputs are not actuated)	s
Switching output fixed	I/min
Special hysteresis (standard = 2 % of end value)	<u></u> %

#### Options

Rotor with titanium clamps

#### Accessories

- Cable/round plug connector (KB...) see additional information "Accessories"
- Device configurator ECI-1
- Mechanical connection pieces with non-return valve, filter, constant flow device or customer-specific requirements available on request

professional Instruments "MADE IN GERMANY"