






LM Actuator

Optimal for high speed and long stroke Long term maintenance-free operation is actualized Lightweight, compact structure



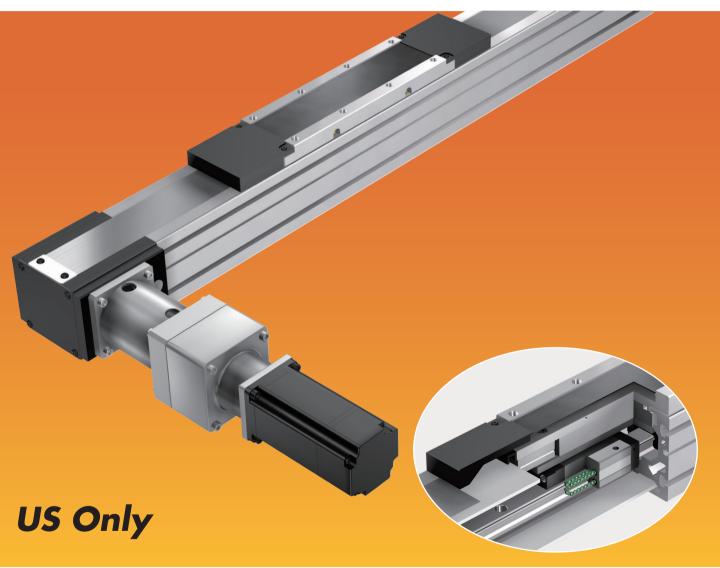

THK CO., LTD.

TOKYO. JAPAN


CATALOG No.352E



Tel.: 0940 644 565 E-mail: lintech@hennlich.sk

Structure of Model TY

This belt drive actuator has a caged ball LM Guide combined with a lightweight and compact aluminum base. Options such as a stainless steel cover, a motor bracket or a sensor make it useful for a variety of applications.

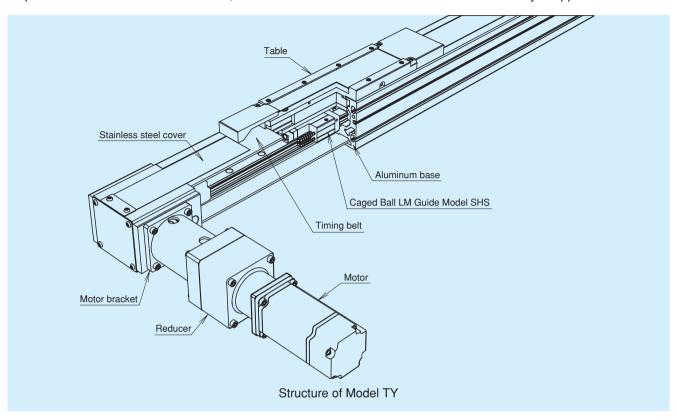

Features of Model TY

1. Optimal for long stroke high speed conveyance

A maximum stroke of 4749 mm* is possible due to the belt drive method.

A maximum travel speed of 3400 mm/s is possible when an AC servomotor (rated rotational speed 3000 min.⁻¹) with a 3:1 reducer is used.

* Stroke between the mechanical stoppers

Maximum Travel Speed

Unit: mm/s


Model no.	TY20				
Speed reduction ratio	1/3	1/5	1/9		
Maximum travel speed	3400	2000	1100		

Note 1) Please note that when the stroke is short, it may not reach the maximum travel speed. Note 2) The maximum travel speed for actuators with a stainless steel cover is 2500 mm/s.

Table Travel Distance per Pulley Rotation

		Table travel dis	stance [mm] per	motor rotation
Pitch circle diameter of the pulley [mm]	pulley rotation [mm]	Speed reduction ratio: 1/3	Speed reduction ratio: 1/5	Speed reduction ratio: 1/9
65.25	205	68.3	41	22.8

Note) The timing pulley has a large pitch circle diameter, so THK recommends the use of a reducer.

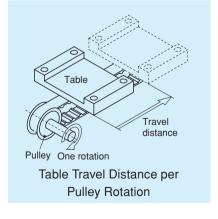

1 171111

HENNLICH s.r.o.



2. Long service life and long term maintenance-free operation


Built-in Caged Ball LM Guide model SHS.

Long service life and long term maintenance-free operation are possible because there is no mutual friction between the balls and grease retention is improved due to the effect of the caged ball.

QZ Lubricator is equipped as standard*.

The QZ Lubricator supplies an optimal amount of lubricant to the raceway of the LM rail, substantially extending maintenance intervals.

* For Model TY, the QZ Lubricator is equipped on a single side only for each LM block.

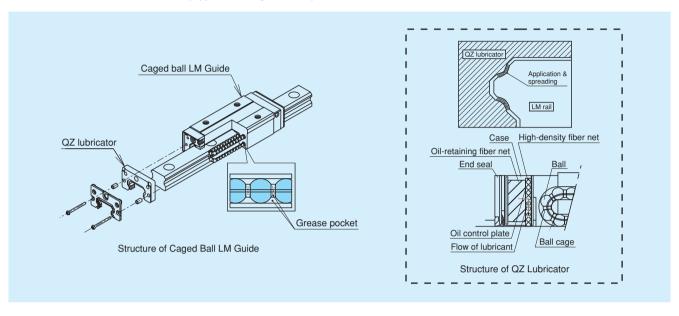



3. Quality dustproof cover optional*

A tightly sealing stainless steel cover prevents foreign matter from entering the actuator.

* Please note that, with a stainless steel cover, maximum base length and maximum travel speed will be restricted. (Maximum base length: 3540 mm; maximum travel speed: 2500 mm/s)

4. Lightweight, compact structure

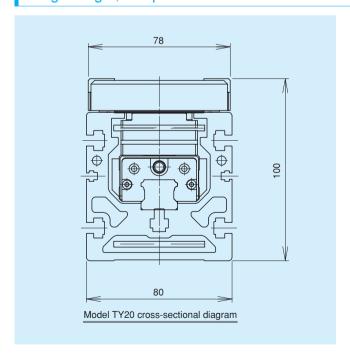

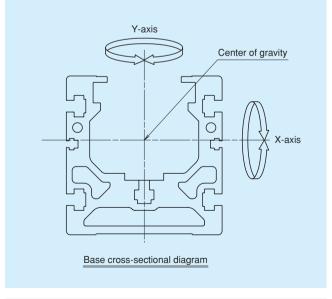

Base geometrical moment	lx [mm⁴]	1.49 × 10 ⁶
of inertia	ly [mm⁴]	1.94 × 10 ⁶
Mass [ko	6.65	




Specifications

Мс	odel no.	TY20			
Drive	e method	Timing belt drive			
Pitch circle diame	eter of the pulley [mm]	65.25			
Positioning rep	eatability Note 1) [mm]	±0.1			
Mechanical	Stroke Note 2) [mm]	549 to 4749 (specifications without a stainless steel cover)			
Model no. fo	or LM Guide use	SHS20V (Two blocks)			
LM Guide unit	Basic dynamic load rating C [N]	22300			
Livi Guide unit	Basic static load rating C ₀ [N]	38400			
Static Permissible Load Note 3) [N]	Axial direction	1100			
	MA	2000			
Static Permissible Moment Note 4) [N-m]	Мв	600			
1,	Mc	500			

Note 1) Positioning repeatability is standardized at an ambient temperature of 20°C.

Note 4) Static permissible moment is the maximum value of the moment that can load on each direction.

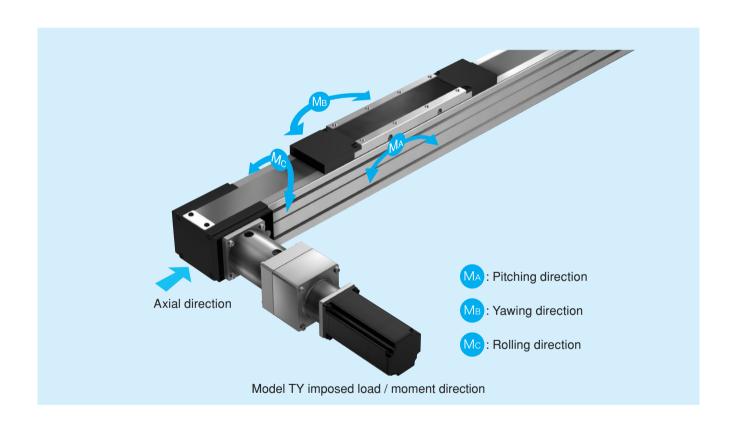





Note 2) Effective stroke is less than mechanical stroke for stainless steel cover option. Please refer to the dimensions tables for details (page 6).

Note 3) For the axial direction, it is determined by the torsion strength of pulley shaft.

Model Number Chart

TY20 - 084 - B1 - C - B

(1)

3)

<u>(4)</u>

(5)

① Model no. TY20

2 Base length e.g.: if it is 840 mm: 084

if it is 1020 mm: 102

3 Motor bracket
N: No motor bracket

For concentric type reducer

B1: Pilot diameter ø50H7, ø5.5, PCD60 B2: Pilot diameter ø70H7, ø6.6, PCD90

U1: Pilot diameter ø38.1H7, M4, PCD66.66 (NEMA23) V1: Pilot diameter ø73.03H7, M5, PCD98.43 (NEMA34)

4 Cover N: No cover

C: With a stainless steel cover


(5) Sensor N: None


B: Photo Sensor EE-SX674 (3 pcs.)
D1: Proximity Sensor GL-N12F (3 pcs.)


D2: Proximity Sensor GL-N12F (1 pc.), GL-N12FB (2 pcs.)

D3: Proximity Sensor GL-N12F-P (3 pcs.)

D4: Proximity Sensor GL-N12F-P (1 pc.), GL-N12FB-P (2 pcs.)



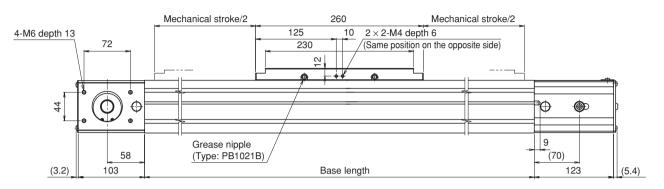

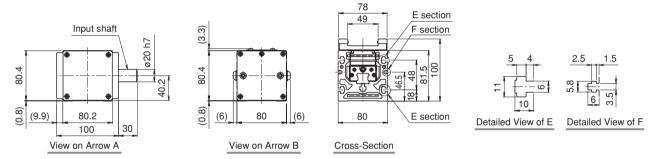

Base length [mm]	840	1020	1320	1620	1920	2220	2520	2820	3120
Mechanical stroke [mm]	549	729	1029	1329	1629	1929	2229	2529	2829
Main unit weight [kg]	13.4	15.1	17.9	20.7	23.5	26.3	29.1	31.9	34.7


Base length [mm]	3420	3720	4020	4320	4620	5040
Mechanical stroke [mm]	3129	3429	3729	4029	4329	4749
Main unit weight [kg]	37.5	40.3	43.1	45.9	48.7	52.6

Note 1) Above figure shows the slider in mid-stroke.



Note 2) Please contact THK for strokes other than those listed above.

Note 3) Please install the unit using the T-slot (E section) on the side (see page 12).

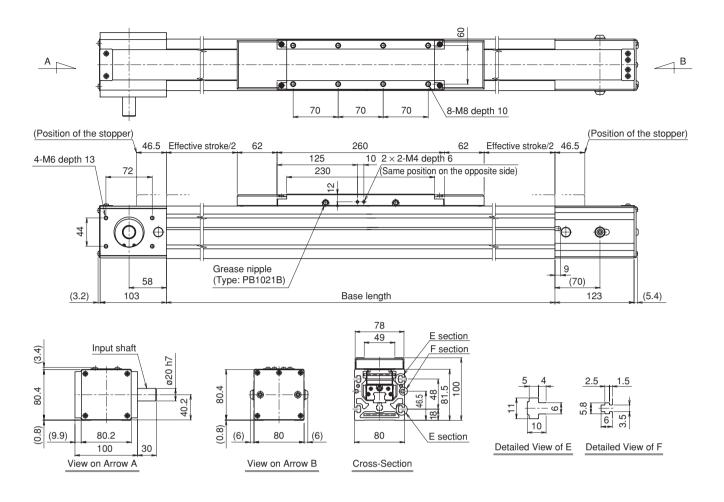

Base length [mm]	840	1020	1320	1620	1920	2220	2520	2820	3120
Mechanical stroke [mm]	549	729	1029	1329	1629	1929	2229	2529	2829
Effective stroke [mm]	456	636	936	1236	1536	1836	2136	2436	2736
Main unit weight [kg]	13.8	15.5	18.3	21.2	24.0	26.8	29.6	32.4	35.2

Base length [mm]	3420
Mechanical stroke [mm]	3129
Effective stroke [mm]	3036
Main unit weight [kg]	38.1

Note 1) Above figure shows the slider in mid-stroke.


Note 2) Please use the actuator within effective strokes. Contact THK for strokes other than those listed above.

Note 3) Please install the unit using the T-slot (E section) on the side (see page 12).

Note 4) The maximum manufacturable base length is 3540 mm for stainless steel cover specifications. Please contact THK for details.




E-mail: lintech@hennlich.sk

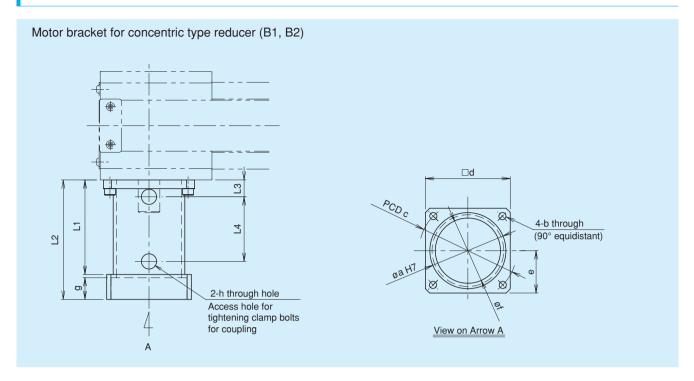

Dimensions of Motor Bracket for Coaxial Type Reducer

Unit: mm

Matarbraakat anda					Мо	otor bracke	t dimensio	ons				
Motor bracket code	а	b	С	d	е	f	g	h	L1	L2	L3	L4
B1	50	5.5	60	56	28	45	14	12	73	87	20	40
B2	70	6.6	90	78	39	60	20	14	90	110	15.5	59.5

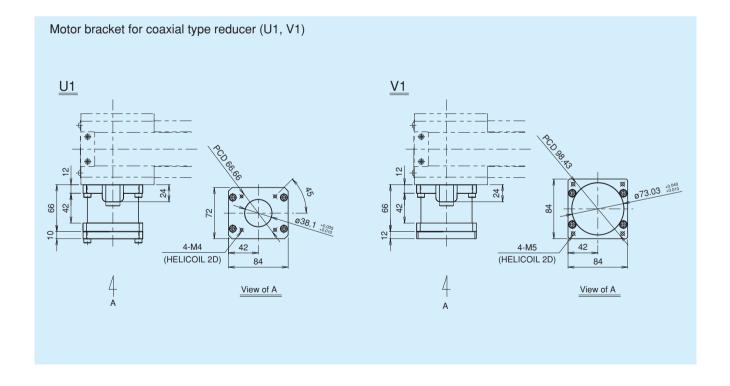



Sensor

Model TY can equip various sensors to the T-groove at the side of the base.


When selecting a sensor, please specify using the corresponding code from the table below.

Tables of Various Sensors

Туре	Output operation	Output	Sensor model number	No. of units	Manufacturer	Symbol
Photo Sensor	N.O. / N.C. (selectable)	NPN	EE-SX674	3	OMRON	В
	N.O.	NPN	GL-N12F	3		D1
	N.O.	NPN	GL-N12F	1		D2
Dravimity Canaar	N.C.	NPN	GL-N12FB	2	SUNX	D2
Proximity Sensor	N.O.	PNP	GL-N12F-P	3	SUIVA	D3
	N.O.	PNP	GL-N12F-P	1		D4
	N.C.	PNP	GL-N12FB-P	2		υ4

Note 1) GL-N12F-P is not NPN, it is PNP.

Sensor mounting dimensions

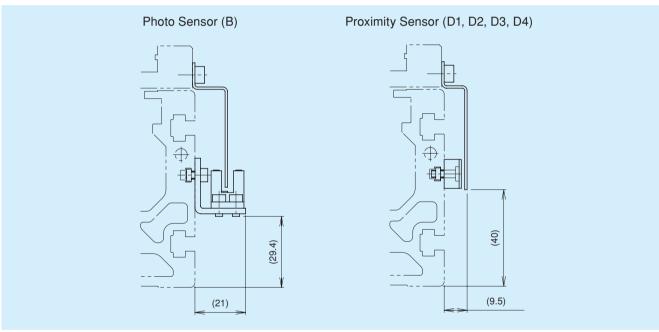


^{*} The direction of the sensor is changeable. The sensor can be removed by sliding the sensor mounting nut from the opposite side of the motor.



Note 2) N.O. contact point is a normally-open type; N.C. contact point is a normally-closed type.

Note 3) Sensors are mounted on the product before being shipped. Please note that a photosensor connector is not included.

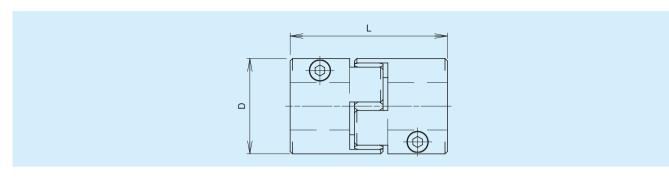


Coupling Model no.	Manufacturer	L [mm]	D [mm]	TY20 Bracket	Applicable Reducers
ALS-040-R-XXB-20B	Milei Delless	66	40	B1	VRAF-B
ALS-055-R-XXB-20B	Miki Pulley	78	55	B2	VRAF-C
SC050R-XXB-20B (Max 25 mm)	3 (Max 25 mm) Zero-Max		56	U1, V1	Nema23, Nema34


^{*} Please see the catalog of the coupling manufacturers (Miki Pulley Co., Ltd. and Zero-Max, Inc.) for details.

Base mounting bracket

The mounting brackets for mounting the base are available.

Note) this is not a standard attachment, so please specify the number of pieces required.

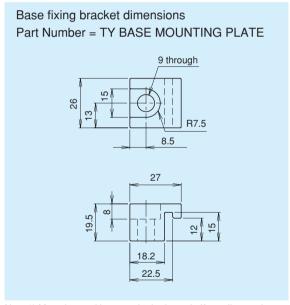

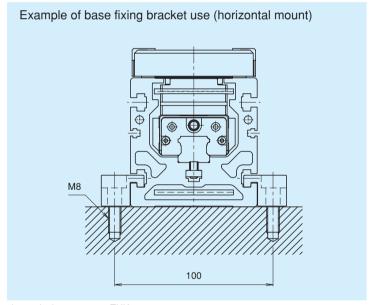

Note 1) Mounting position must be horizontal. If a wall mounting position is used, please contact THK. Note 2) Mounting intervals of the base fixing brackets should be approximately 250 to 300 mm.




^{*} Mount the base fixing bracket by sliding it from the opposite side of the motor.

Example of mounting the base (horizontal mount)

The diagram below shows a base mounting example without using the base fixing brackets.

Note) Mounting position must be horizontal. If a wall mounting position is used, please contact THK.

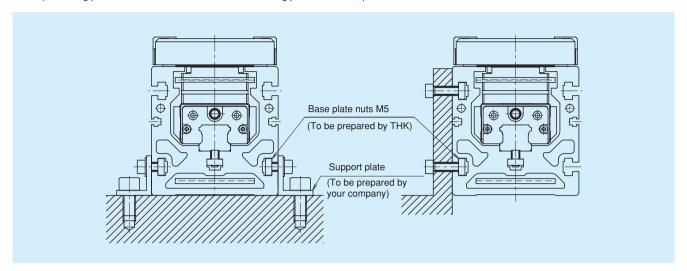


Dimensions of the nuts for mounting the base

The nuts are available for mounting the base that are used for the above mounting example. This is not a standard attachment, so please specify the number of pieces required.

Note) Mounting intervals of the base mounting nut should be approximately 250 to 300 mm.

* Mount the base mounting nut by sliding it from the opposite side of the motor.

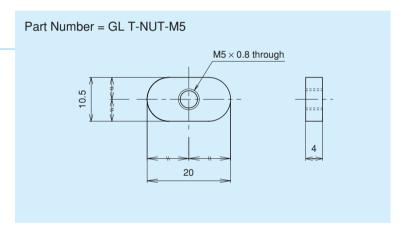





Appendix

Selecting a Model TY

(1) Calculate the service life of the LM Guide from load conditions in order to check that it is sufficiently safe and satisfies the desired service life.



2 Select the motor and check that the output torque of the reducer is the same as permissible input torque of the actuator or less.



3 Select the options (motor bracket, sensor, cover) as necessary.


Service life / static safety factor

For information about the service life and static safety factor of the TY model LM Guide, see the LM Guide section in the General Catalog. Also, rated life of the LM Guide can be calculated in the THK's technical support site (https://tech.thk.com/), or using the technical calculation software that is recorded in the CD catalog. See the data in the table below when calculating rated life.

Note) Please note that the calculation of the service life is a theoretical calculation. Under actual operation, life may vary depending on the operating conditions including operating environment, lubricating condition, mounting accuracy, rigidity, etc.

LM Guide unit

Model no. for LM Guide use B1 [mm]	Thrust	agaitian	Block span	Movable unit					
	must	oosition	вюск ѕрап	Mass	Cent	er of gravity pos	G2 G3 [mm]		
		B2 [mm]	L1 [mm]	m [kg]	G1 [mm]	G1 G2 G3			
SHS20V	0	-45	109	1.2	0	54.5	52.2		

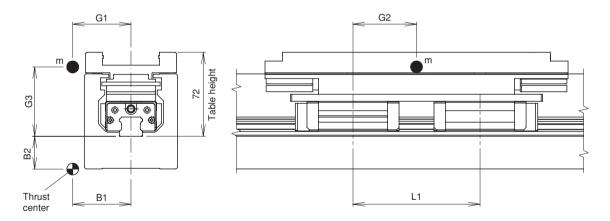





Selecting the motor

When selecting the motor for mounting on Model TY, please select by referring to the data in the table below. Please contact each motor manufacturer for information on motor selection and motor specifications.

	Timing pulley		
Timing belt model no.	Model no.	Pitch diameter [mm]	Inertial moment (total of two pieces) [kg-cm²]
050-MA5	41-MA5-050	65.25	5.8

^{*} Belt mass: 0.192 kg/m

Belt length = base length × 2 + 280 mm

[Reference]

Coupling Model no.	Manufacturer	Inertia [kg-cm²]
ALS-040-R-XXB-20B	Mild Dullan	0.4
ALS-055-R-XXB-20B	Miki Pulley	1.63
SC050R-XXB-20B	Zero-Max	1.41

^{*} Please see the catalog of the coupling manufacturers (Miki Pulley Co., Ltd. and Zero-Max, Inc.) for details.

Reducer Model no.	Inertia [kg-cm²]	Manufacturer
VRAF-B03	0.197	- Shimpo Drives
VRAF-B05	0.17	
VRAF-B09	0.162	
VRAF-C03	1.182	
VRAF-C05	0.902	
VRAF-C09	0.821	

^{*} Please see the catalog for the reducer manufacturer (Shimpo Drives, Inc.) for details.

Permissible input torque [N-m]
37.3









Precautions on Use

Operation

- · Unnecessarily disassembling this product may allow foreign objects to enter reduce functionality.
- · Do not drop or knock this product. Doing so may cause injury or damage the unit. If the product is dropped or impacted, functionality may be reduced even if there is no surface damage.
- Do not allow foreign matter such as dust and cutting powder to enter. This may damage the ball recirculation part or reduce functionality.
- When the product is in motion or about to be in motion, do not touch any moving parts. Do not go near the actuator when it is in motion.
- · If two or more people are involved in the operation, confirm the procedures such as sequences, signs, and abnormalities in advance, and appoint another person for monitoring the operation.
- · Anti-rust oil is applied to the input axis for coupling installation. Please wipe the anti-rust oil off completely when installing couplings.
- · Mounting position must be horizontal. If a wall mounting position is used, please contact THK.

Environment

The wrong environment can cause poor production failure. The best places to use the device are as follows:

- An environment with an ambient temperature from 0 to 40°C and humidity of no more than 80% RH that will not expose the product to freezing or condensation
 - Contact THK if you are considering using the product in an environment with an operating temperature outside of the specified range.
- · A place free from corrosive gas or flammable gas.
- · A place free from dust, salt or metal powder.
- · A place where water, oil and chemicals will not get on the product.
- · Places where vibration or impact are not transmitted to the unit.
- · Contact THK if the product will be used in a special environment, such as one with constant vibration, a clean room, a vacuum, or a low-/hightemperature environment

Lubrication

- · Please use this product after sealing lubricant.
- In order to effectively use this product, lubrication is required. Insufficient lubrication may increase abrasion on the rolling part and shorten service life. THK AFB-LF grease, the standard grease for this product, is enclosed.
- · Do not use a mix of lubricants with different physical properties.
- Please contact THK if using special lubricants.
- · Please contact THK if using this product with oil lubrication.
- The greasing interval is usually 100 km; however, this may vary depending on the operating conditions, so THK recommends determining a greasing interval during the initial inspection.
- · Regular lubricants may not be used when this product is operated in a special environment such as one with constant vibration, a clean room, a vacuum, or low-/ high-temperature environment. In such cases, please contact THK,

Storage

- When storing the product, enclose it in a package designated by THK and store it in a horizontal orientation while avoiding locations subject to high temperature, low temperature and high humidity.
- "LM Guide," "Caged Ball," and " are registered trademarks of THK CO., LTD.
- The actual products may differ from the pictures and photographs in this catalog.
- Outward appearances and specifications is subject to change without notification for purposes of improvement, please inquire before using them.
- Although great care has been taken in the production of this catalog, THK will not take any responsibility for damage resulting from typographical errors or omissions.
- In exporting our products and technology, or selling them for the purpose of export, THK has a basic policy of observing laws relating to foreign exchange, trade and other laws. For export of THK products as single items, contact THK in advance. All rights reserved

THK CO., LTD.

HEAD OFFICE 3-11-6, NISHI-GOTANDA, SHINAGAWA-KU, TOKYO 141-8503 JAPAN INTERNATIONAL SALES DEPARTMENT PHONE:+81-3-5434-0351 FAX:+81-3-5434-0353

Global site: http://www.thk.com/

NORTH AMERICA

THK America,Inc.

HEADQUARTERS

Phone:+1-847-310-1111 Fax:+1-847-310-1271

●CHICAGO OFFICE Phone:+1-847-310-1111 Fax:+1-847-310-1182

NEW YORK OFFICE Phone:+1-845-369-4035 Fax:+1-845-369-4909 ●ATLANTA OFFICE

Phone:+1-770-840-7990 Fax:+1-770-840-7897 ●LOS ANGELES OFFICE

Phone:+1-949-955-3145 Fax:+1-949-955-3149 SAN FRANCISCO OFFICE

Phone:+1-925-455-8948 Fax:+1-925-455-8965 BOSTON OFFICE Phone:+1-781-575-1151 Fax:+1-781-575-9295

•DETROIT OFFICE Phone:+1-248-858-9330 Fax:+1-248-858-9455

 TORONTO OFFICE Phone:+1-905-820-7800 Fax:+1-905-820-7811

SOUTH AMERICA THK Brasil LTDA

SOYINK

Phone:+55-11-3767-0100 Fax:+55-11-3767-0101

EUROPE

THK GmbH ●EUROPEAN HEADQUARTERS

Phone:+49-2102-7425-0 Fax:+49-2102-7425-217

◆DÜSSELDORF OFFICE

Phone:+49-2102-7425-0 Fax:+49-2102-7425-299

FRANKFURT OFFICE

Phone:+49-2102-7425-650 Fax:+49-2102-7425-699 STUTTGART OFFICE

Phone:+49-7150-9199-0

Fax:+49-7150-9199-888 ●MÜNCHEN OFFICE Phone:+49-8937-0616-0 Fax:+49-8937-0616-26 •U.K. OFFICE Phone:+44-1908-30-3050 Fax:+44-1908-30-3070

OITALY MILANO OFFICE

Phone:+39-039-284-2079

ITALY BOLOGNA OFFICE Fax:+39-039-284-2527 Phone:+39-051-641-2211 Fax:+39-051-641-2230 OSWEDEN OFFICE Phone:+46-8-445-7630

Fax:+46-8-445-7639 AUSTRIA OFFICE Phone:+43-7229-51400
SPAIN OFFICE Fax:+43-7229-51400-79

Phone:+34-93-652-5740 Fax:+34-93-652-5746 **OTURKEY OFFICE** Phone:+90-216-362-4050 Fax:+90-216-569-7150

OPRAGUE OFFICE Phone:+420-2-41025-100 Fax:+420-2-41025-199 THK France S.A.S.

Fax:+33-4-3749-1401

Phone:+33-4-3749-1400 CHINA THK (CHINA) CO.,LTD.

OHEADQUARTERS Phone:+86-411-8733-7111 Fax:+86-411-8733-7000 SHANGHAI OFFICE

Phone:+86-21-6219-3000 Fax:+86-21-6219-9890 ●BEIJING OFFICE

Phone:+86-10-8441-7277 Fax:+86-10-6590-3557 CHENGDU OFFICE

Phone:+86-28-8526-8025 Fax:+86-28-8525-6357 ●GUANGZHOU OFFICE Phone:+86-20-8523-8418 Fax:+86-20-3801-0456

THK (SHANGHAI) CO.,LTD Phone:+86-21-6275-5280 Fax:+86-21-6219-9890

TAIWAN THK TAIWAN CO.,LTD.

●TAIPEI HEAD OFFICE

Phone:+886-2-2888-3818 Fax:+886-2-2888-3819

TAICHUNG OFFICE

Phone:+886-4-2359-1505 Fax:+886-4-2359-1506 **OTAINAN OFFICE**

Phone:+886-6-289-7668 Fax:+886-6-289-7669 KOREA

SEOUL REPRESENTATIVE OFFICE Phone:+82-2-3468-4351 Fax:+82-2-3468-4353 SINGAPORE

THK LM SYSTEM Pte. Ltd. Phone:+65-6884-5500 Fax:+65-6884-5550

INDIA BANGALORE REPRESENTATIVE OFFICE Fax:+91-80-2314-8226 Phone:+91-80-2330-1524

©THK CO., LTD.

20081204 E6 Printed in Japan



HENNLICH s.r.o.

Košťany nad Turcom 543, 038 41 Košťany nad Turcom

Tel.: 0940 644 565 E-mail: lintech@hennlich.sk

www.hennlich.sk